

Wireless Arming Station

Operating Instructions



Up to four wireless arming stations can operate on a wireless alarm system.


Setting and Unsetting

If you are using a proximity tag to set or unset the wireless alarm system, press any key first (except **D**), to 'wake' the wireless arming system before presenting a tag.

Alternatively, if a user code is being used, then enter the code. The wireless arming station will automatically 'wake' once the first button is pressed.

After a tag or code has been entered, select the area to set by pressing **A**, **B**, **C** or **D**. The key will illuminate indicating that area has been chosen to be set. Once confirmed, press the key.

To unset, enter the user code, or press any key then present the proximity tag.

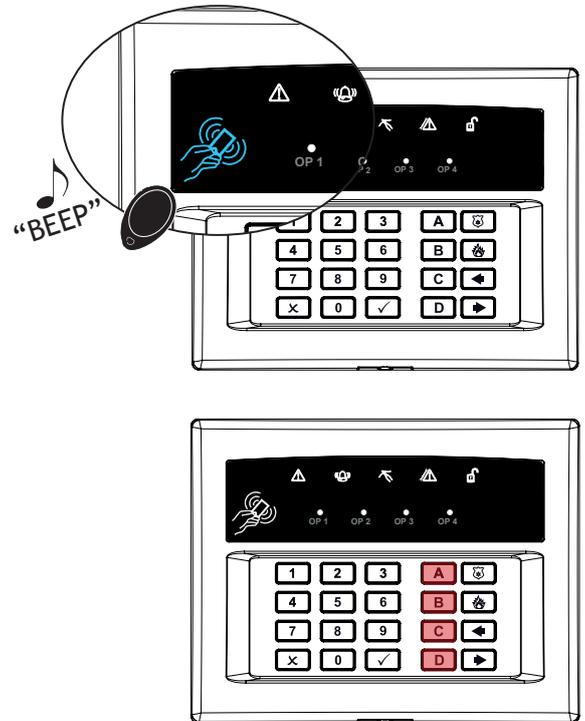


Activating the Outputs

Press the **D** key and enter the Master Manager code or a user code.

The keys **1**, **2**, **3** and **4** will illuminate.

The OP1–4 LEDs will illuminate once the 1-4 numeric keys have been pressed. Once illuminated, it signifies that the output has triggered. Press the key again to deactivate the output.

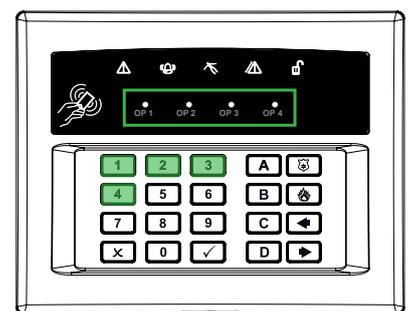

Extended User Guide



<https://bit.ly/2pdjBQg>